

Cover Color

All covers offer UV protection. Covers will fade and change color at different rates based on fabric construction and exposure to sunlight. Color fading is a natural process of dyed fabrics and does not affect the product's ability to protect your PWC from the elements.

Care and Maintenance

For all Wolf Marine PWC Covers

- 1) **ENSURE PWC IS THOROUGHLY DRY BEFORE COVERING FOR LONG TERM STORAGE.**
- 2) To clean cover, rinse with water. A mild soap or detergent may be used to remove soil.
- 3) Hang cover to dry.

Limited Warranty

Wolf Marine warrants to the original purchaser that the product will be free from material defects and defects from workmanship as follows from the date of purchase:

Universal	1 year
Ready Fit	3 years
Custom Fit	5 years

Not covered under the warranty is damage caused by: misuse; neglect; accident; improper installation; allowing the product to come into contact with sharp objects, chemicals, gasoline, or liquids other than water; not properly securing the product; allowing water or ice to pocket on the cover; animals, including but not limited to birds, rodents, and household pets; or the product being exposed to pollution or acid rain.

Excluded from the warranty are all incidental and/or consequential damages. Implied warranties are limited to the life of the warranty. Some states do not allow the manufacturer to limit the warranty or how long the warranty lasts or the exclusion of incidental or consequential damages, so the above exclusion or limitation may not apply in your state.



Universal

Ready Fit

Custom Fit


GLOBAL
ACCESSORIES, INC.

P.O. Box 3656
Logan, UT 84323-3656
www.Global-Accessories.com



Custom Fit Personal Water Craft Cover

Installation, Care and Maintenance Instructions

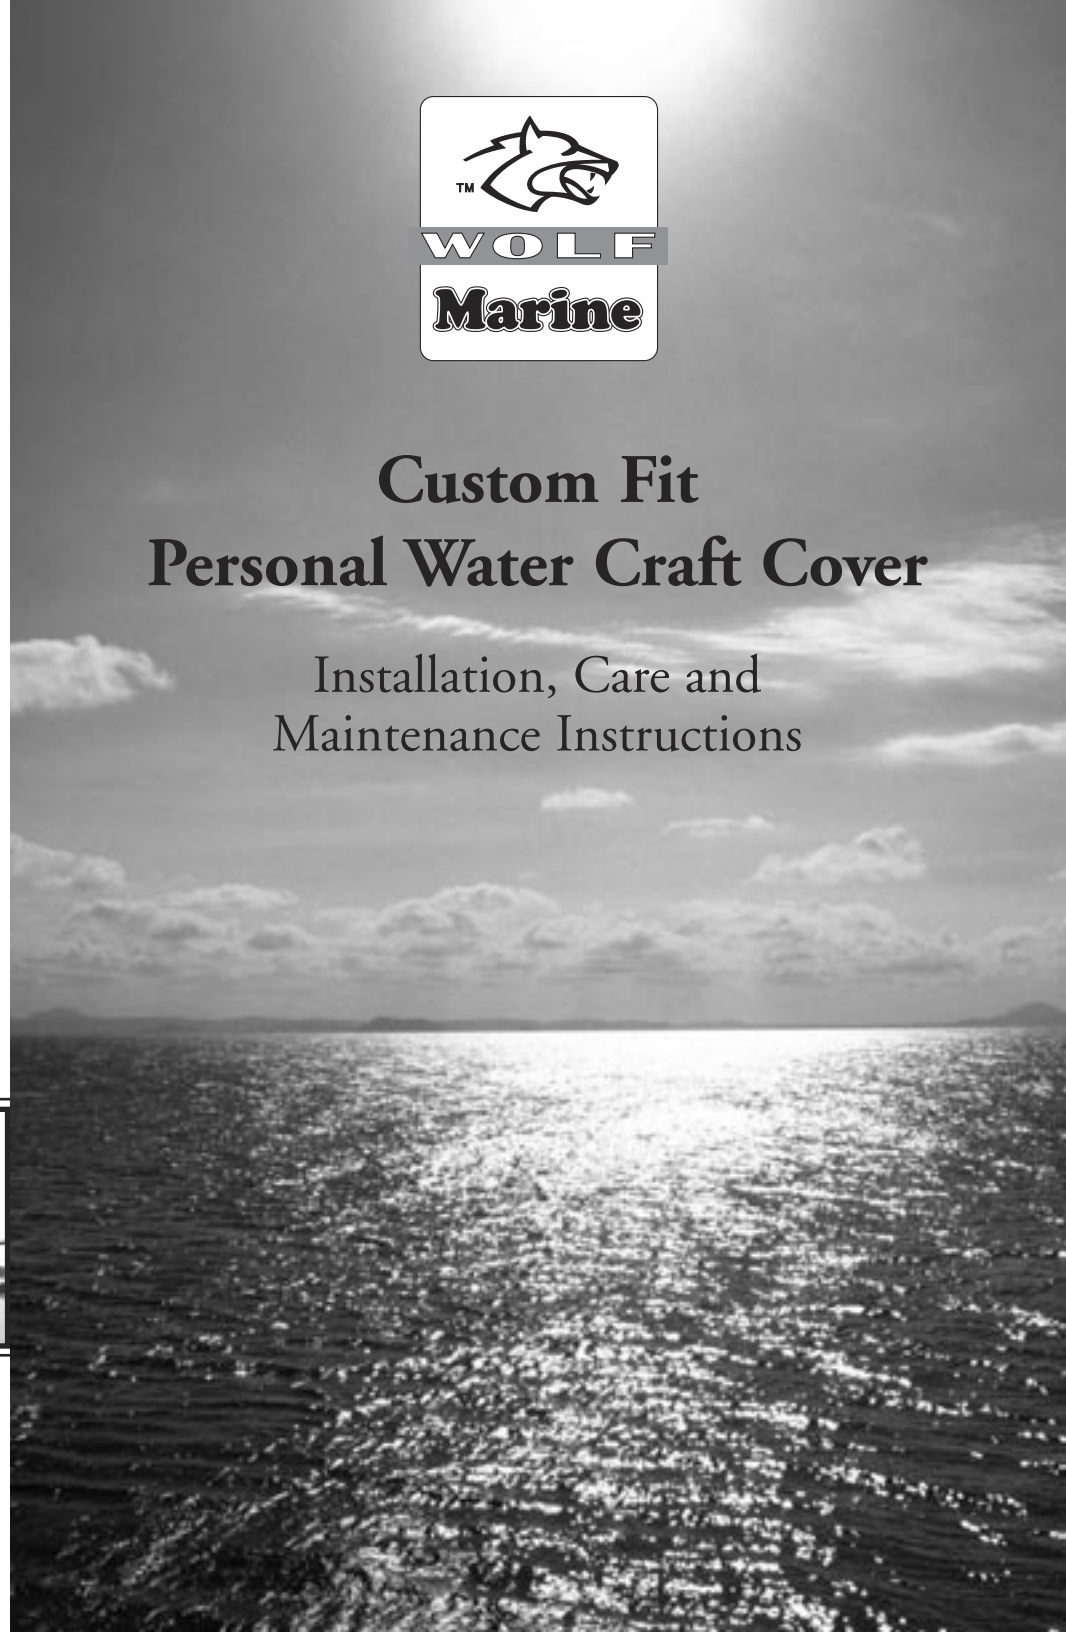

Trailerable PWC Covers




1 Locate sewn in tag marked “FRONT” and lay cover across top of PWC with the tag pointed toward forward part of craft. If applicable, mirror pockets should be placed over mirrors at this time.



2 Starting at the handlebars, pull cover towards the front of the PWC and secure bib over bow so that the hole in the bib aligns with the pull ring mounted to the bow.



3 Pull cover rearward over the handlebar, making sure the cover falls under the rub rail as you go.

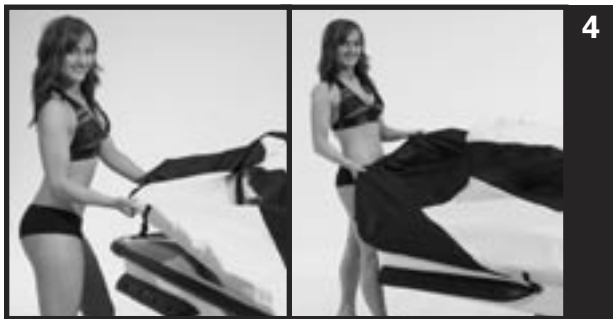

4 Continue to pull cover rearward evenly over both sides over the rub rails.

Pull cover over top of the seat back, and then continue to pull cover towards back of craft.



5 Starting at one corner at the rear of the PWC, pull cover down over the rub rail, and then pull cover across back of craft to the opposite corner. Final check should be done to ensure that cover is below rub rail at all areas around the PWC.



6 Attach the nylon straps to the quick-release buckles. Release the strap buckles from the sewn-on strap. Thread nylon strap through the quick-release buckle. If the strap is threaded correctly through the buckle, the strap will lock in place when tension is applied.

If the strap is threaded incorrectly it will slip when tension is applied.



7 After threading the straps through the quick-release buckles, reconnect the buckles to both sides of the PWC cover.



8 Tighten down the cover by pulling down on the ends of the straps. Tighten both sides of the cover evenly.

Failure to properly install all straps may void warranty.